SALORA

DVP-7020

Portable DVD player with two 7” LCD screen

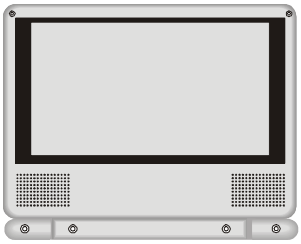

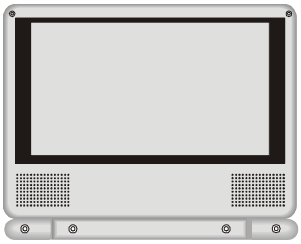

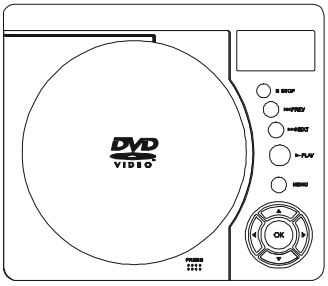

Owner’s Manual

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

Notice:

This Product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

Content

A. Introduction 1

B. Cautions and Warnings 1

C. Contents 3

D. Powering and installation 4

E. Controls, Indicators, and Connectors 6

F. Loading and Playing a Disc 8

G. Setup..... 9

H. Basic Operation 15

I. Menu 16

J. Display..... 16

K. Variable Playing Mode 20

L. Connecting to a TV or another monitor.....25

M. Specifications 26

N. Troubleshooting 27

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

A. Introduction

Thank you for choosing the portable DVD player with twin 7” LCD screen. The main features include two 7" Wide Screen (16:9 Aspect Ratio) Liquid Crystal Display (LCD) monitors and a single DVD player. Please read the entire instruction manual supplied with this product prior to using. The documentation will assist you in installing the system properly to obtain the best equipment performance. Please save this manual for later use.

B. Cautions and Warnings

1. Placement

To prevent fire or electric shock, do not expose this appliance to rain or moisture. Do not place the set on an unstable cart, stand, tripod, bracket or table to prevent it from falling. Keep the unit away from strong magnets, heat sources, direct sunlight, excessive dust. If the unit is brought directly from a cold to a warm location, moisture may condense inside the unit. When you move it from a cold to a warm location, wait for about one hour before operating the unit, or remove the disc and leave the unit turned on until the moisture evaporates.

2. Installation

Ensure that 7” the DVD player and monitors are installed in accordance with the instructions and illustrations provided in this manual.

3. Caution

Do not push objects of any kind into the unit through openings; do not spill or spray liquid of any kind on or in the system (this may result in a fire or electric shock). Do not place anything heavy on the unit. To ensure proper ventilation and proper operation, never cover or block the slots and openings with a cloth or other material. Keep the unit away from an open flame such as fire, candle etc. It is hazardous to replace the battery incorrectly. Replace the battery only with the same or equivalent type, in order to protect the

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

environment,please dispose the battery properly. Do not use the unit in temperatures higher than 95 degrees Fahrenheit or 35 degrees Celsius.

4.Disassemble

Do not attempt to disassemble the cabinet. There is a risk of electric shock and/or exposure to Laser Radiation. Contact qualified service personnel if your system needs repair.

5. Cleaning Unit

When cleaning, make sure the system is unplugged from the power source. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the system only.

6. Disc

Do not use irregularly shaped discs such as heart or star-shaped discs as they may cause the unit to malfunction. Do not stick paper, tape or glue on the disc. Do not expose the disc to direct sunlight or heat sources. Do not touch the surface of disc. Handle the disc by its edge. Clean the disc by wiping the disc from the center out with a cleaning cloth. Remove the disc from the unit and store it in its case after playing. Some playback operations of discs may be intentionally fixed by software producers. Since this unit plays discs according to the disc contents the software producers designed, some playback features may not be available. Also refer to the instructions supplied with the discs.

7. Regional Coding

Both the DVD player and disc are coded by region. These regional codes must match in order for the disc to play. If the codes don't match, the disc won't play. This unit's code is region 2**.** DVD's with other regional codes cannot be played in this unit.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

C. Contents

1. 1 x DVD Player
2. 2 x 7” Monitors
3. 1 x Remote Control with battery (CR2025)
4. 2 x DIN to AV Adapter
5. 1 x AC to DC Adapter
6. 1 x Cigarette Lighter Adapter
7. 1 x Instruction Manual
8. 1 x Carry Bag
9. 2 x Pouch for 7” single monitor
10. 1 x Pouch for DVD

D. Powering and installation

1. Powering the system indoors (Refer to Figure 1)

Plug one end of the AC to DC adapter into the DC Input jack on the right side of the DVD player, then plug the other end into the 100~240V AC power receptacle.

2. Powering the system in a car (Refer to Figure 1)

Plug one end of the cigarette lighter adapter into the DC Input jack on the DVD player, then plug the other end into the cigarette lighter socket.

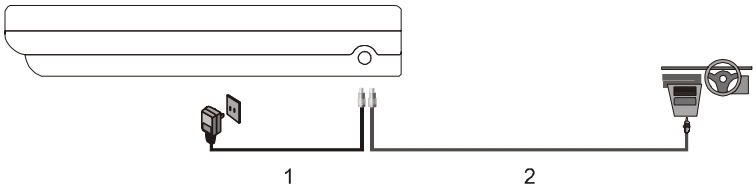

Figure 1

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

3. Connection with DVD player and monitors (Refer to Figure 2)

The single monitors only can be powered by DVD player.

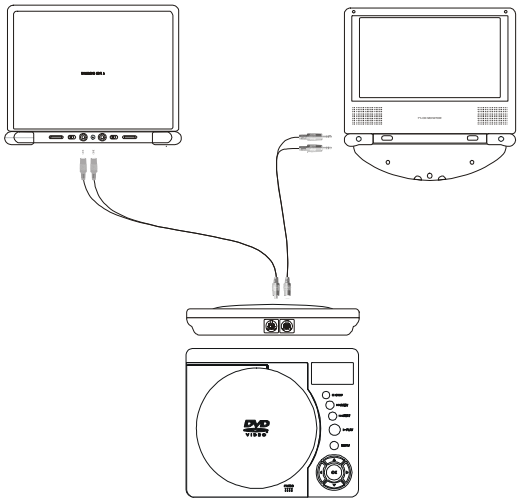

Figure 2

Note: Unplug the apparatus when not using for a long time or intent to disconnect from the Mains power.

4. Installation Prior to use

1) Pouching the DVD player (Refer to Figure 3)

Pull out the slide fastener of the pouch to slide the DVD player into the pouch, and feed the bottom piece of the DVD into the bottom of the pouch. Then close the slide fastener.

Figure 3

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

2) Positioning the Monitor

Option 1 Vehicle Headrest (Refer to Figure 4)

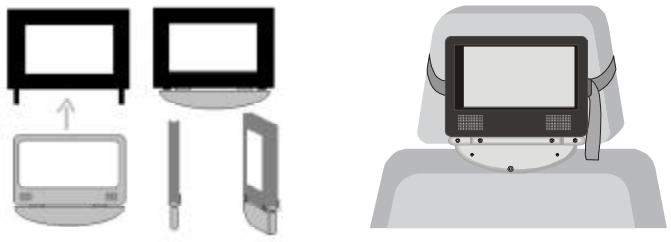

Figure 4

Slide screen in to the case with display pointing out Squeeze the magic tape between tilting foot and display and fix on back side. Then loop the strap of the pouch around the headrest in the vehicle and pull the end of the strap while holding the buckle until the pouch is tightly secured.

Option 2 Flat Surface (Refer to Figure 5)

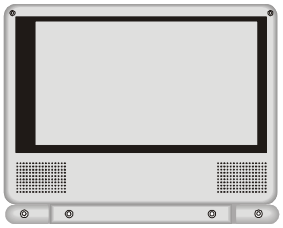

Figure 5

Rotate the base of Monitor backward and place it on a flat surface. Adjust the screen for a proper viewing angle. This can be done with the Monitor inside or outside the pouch.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

E. Controls, Indicators, and Connectors

1. Unit View (Refer to Figure 6)

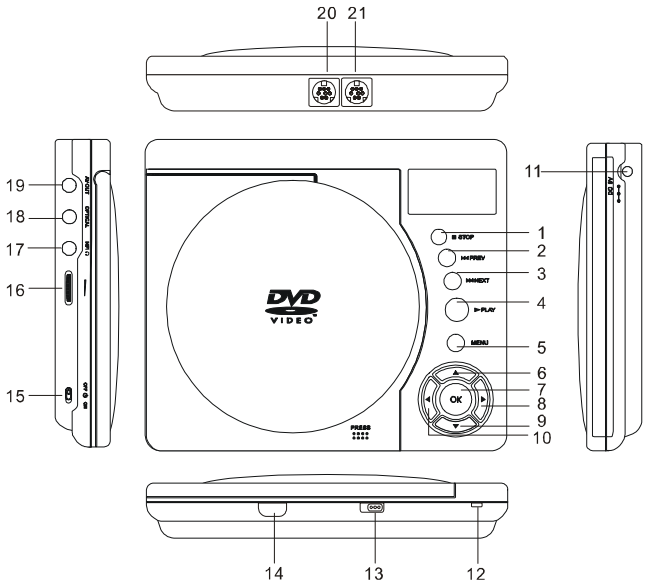

Figure 6

1) Stop Button
2) Previous Button
3) Next Button
4) Play Button
5) Menu Button
6) Up button
7) OK Button
8) Right Button
9) Down Button
10) Left Button
11) DC 9V Input Jack
12) Power LED
13) Open Switch
14) Remote Control Sensor
15) Power On/ Off Switch
16) Volume Control
17) Headphone Jack
18) Optical Jack
19) AV Out Jack
21) Monitor Port 2
20) Monitor Port 1

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

2. Single Monitor View (Refer to Figure 7)

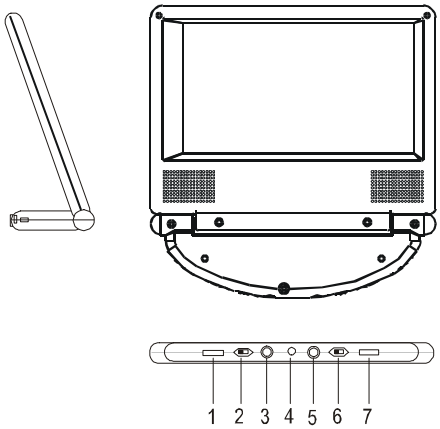

Figure 7

1). Brightness Up/Down Control
2). Power Off/On Switch
3). AV In Jack
4). DC 9-12V Input Jack
5). Headphone Jack
6). Up/Down Switch
7). Volume Up/Down Control

NOTE: Press the Up/Down Switch, you can reverse the screen image.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

3. Remote Control View (Refer to Figure 8)

1) Setup Button
2) Up Button
3) Skip- Button
4) Enter Button
5) Reverse/Left Keypad
6) DOWN Button
7) Numeric Button
8) Display Button
9) Zoom Button
10) Subtitle Button
11) Skip+ Button
12) A-B Repeat Button
13) Forward/Right Keypad
14) 1/All Repeat Button
15) Stop Button
16) Menu Button
17) Audio Button
18) Angle Button
19) Play/Pause Button

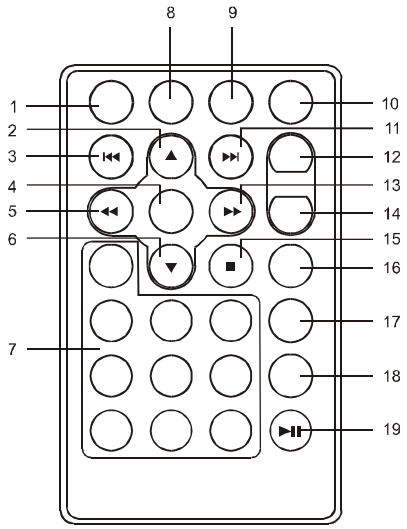

Figure 8

F. Loading and Playing a Disc

a. After connecting power to the unit, power on “DVD player” with the power switch. The power indicator will light.
b. Open the disc tray by pressing OPEN, and place a disc into the tray with the label side facing up.
c. Close the tray by pressing the “PRESS” button.The unit will load the disc and start playing.
d. Rotate BRIGHTNESS and VOLUME to adjust the LCD’s brightness and the DVD player’s volume.
e. To stop playing a disc, press STOP.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

G. Setup

1. General Setup Page

1)With no disc inside the player, press 'SETUP' to display the Main screen of the Setup Menu on the screen and "General Setup Page" appears. At the same time, " " is highlighted. Press 'SETUP' again to exit the Setup Menu and the unit will resume it's last playback mode.

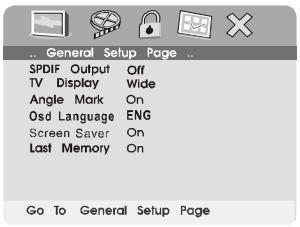

Main Setup Menu Screen

2)Press the ENTER button, "SPDIF Output" is highlighted.

3) Press the ▲ or ▼ button to select the other menus in general setup page.

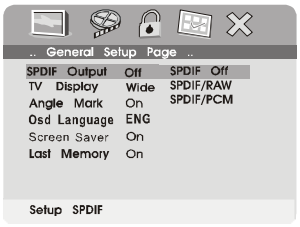

4) Press ► to enter the sub menu.

5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.

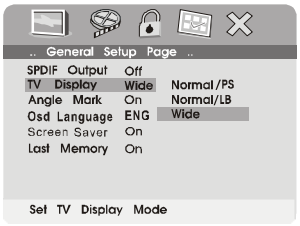

6) Repeat steps 3-5 for other menus.

Note: Press ◄ to return the previous menu.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

a) **SPDIF Output**

* SPDIF Off: The digital signal audio output will be off.
* SPDIF/RAW: The audio output will be not modulated.
* SPDIF/PCM: The audio output will be modulated in Pulse Code Modulation mode.

b) **TV Display**

* Normal/PS: When the player outputs signal to a normal TV, a normal picture is shown on the full screen.
* Normal/LB: When the player outputs signal to a normal TV, a normal picture is shown on the screen with a black strip at both the top and bottom of the screen.
* Wide: When the player outputs signal to a wide screen TV, a wide picture is shown on the full screen.

c) **Angle Mark**

* On: The screen will show the angle mark icon. (*If an angle option is available).
* Off: The screen will not display the Angle Mark

NOTE: Not all discs contain above features. The above features are disc dependent.

d)**Osd Language**

Chosse different language as your OSD language

e). Screen Saver

*On: Enables screen saver

***NOTE:** The DVD player will enter the Screen Saver mode after approximately five minutes if the same image remains on the screen.

*Off: Disables screen saver (off)

f) **Last Memory**

*On: The unit will return to the last position on the disc.

*Off: The unit will not return to the last position on the disc.

Note: The Last position memory function only effect for OPEN operation.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

2.Video Quality Setup

1)In Setup menu, Press the ◄ or ► button to select “Video Quality Setup” and is highlighted. Press ENTER to enter the video quality setup page.

2)Press the ENTER button, “Brightness” is highlighted.

3)Press the ▲ or ▼ button to select the other menus in video quality setup page.

4) Press ► to enter the sub menu.

5) Press the ◄ or ► button to adjust the quantity and press the ENTER to confirm your selection.

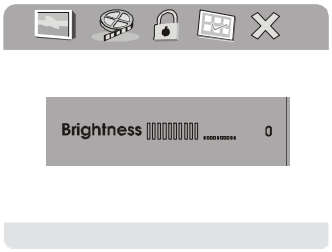

6) Repeat steps 3-5 for other menus.

Note: Press ◄ to return the previous menu.

a) Brightness b) Contrast

c) Hue d) Saturation

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

3. Password

In Setup menu, Press the ◄ or ► button to select “Password Setup Page” and is highlighted. Press ENTER to enter the password page.

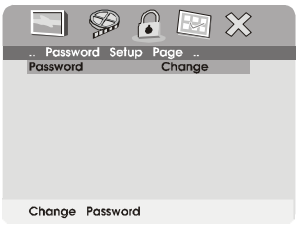

Password Setup Page Screen Display

Press ENTER twice to enter the Password Change Page. Input the Old Password or the Default Password, the New Password, and the Confirmed New Password. Press ENTER to confirm the change.

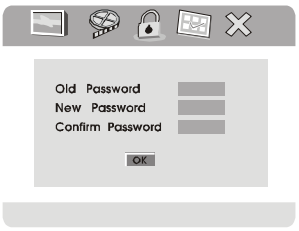

Password Change Page Screen Display

Note: The default password is 3308**.**

4. Preference Page

1) In Setup menu, Press the ◄ or ► button to select “Preference Page”and is highlighted. Press ENTER to enter the preference page.

2)Press the ENTER button, “Audio” is highlighted.

3)Press the ▲ or ▼ button to select the other menus in preference

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

page.

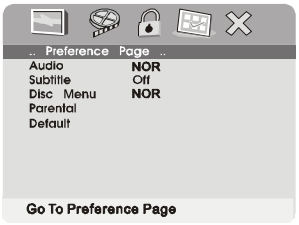

4) Press ▶ to enter the sub menu.

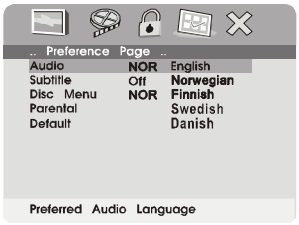

Preference Audio Language

5) Press the ▲ or ▼ button to select the sub menu and press the ENTER to confirm your selection.

6) Repeat steps 3-5 for other menus.

Note: Press ◄ to return the previous menu.

a) Audio b) Subtitle

c) Disc Menu

Note: Language and subtitle selection is only available for discs that are recorded in the above listed languages. If the selected language is not available, the player will play and display on the screen the original recorded language contained in the disc.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

d) Select ‘Parental’ using the UP/DOWN button, then press RIGHT to enter the submenu.

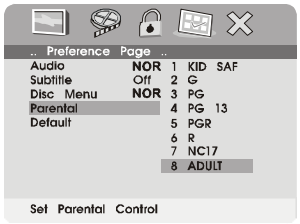

Parental Preference Screen Display

Select the parental level you desire using the UP/DOWN button for discs with lock-out function or multiple rating levels. These are listed from the lowest level (1 Kid Safe) to the highest level (8 Adult). Press ENTER and input 4 digit password, then press ENTER again to confirm the parental level setting.

NOTE: The level of 8 Adult is the factory default.

e) Select ‘Default’ using the UP/DOWN button, then press RIGHT to enter the submenu. Press ENTER to make the setting return to the factory-set mode.

NOTE: The parental setting is not affected by the default reset function.

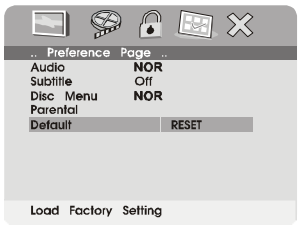

Loading Factory Setting

NOTE: The Default Password is ***3308***. This password is always effective even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, you can record this default password in another area and delete it from this manual. Some discs can be limited depending on the age of users while some discs cannot.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

H. Basic Operation

POWER	Turn the unit on/off
OPEN	Remove/load the disc
PLAY	Start Play/Execute item or setting
PAUSE	Still Picture
STOP	(1 time) Stop at the present playing point / (2 times) Stop playing
NEXT	Go to the next chapter, track or scene during play back
PREVIOUS	Go back to the previous chapter, track or scene during play back
FORWARD	Scan forward at 2, 4, 8,16 or 32 times speed
REVERSE	Scan backward at 2, 4, 8, 16 or 32 times speed
LEFT/RIGHT/UP/DOWN	Used for Menu Navigation
ENTER	Execute item or confirm setting
NUMBERS	Select item or setting
MENU	Display the main menu of the disc
REPEAT	Repeat playing title, chapter, or track
A-B	Repeat a specific portion from point A to point B of the disc
DISPLAY	Display information (title, chapter, track, time, etc.).
ANGLE	Change the viewing angles on the scene
SUBTITLE	Select the subtitle language and turn it on/off
AUDIO	Select the audio language
ZOOM	Enlarge an image to 2, 3, or 4 times the original size.
SETUP	Display the setup menu to select and set items, and exit the setup menu.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

I. Menu

A DVD is divided into sections called titles and chapters. When you play a DVD, a root menu of the disc will appear on the screen of your TV or Monitor. The contents of the menu vary from disc to disc. Press MENU during playback to display the menu. Some DVDs only allow you to select disc playback options using the DVD root menu.

J. Display

1. PLAYING TIME AND REMAINING TIME

a. During playback press the 'DISPLAY' button to display the current Title Number (1), the total Number of Titles (2), the current Chapter Number (3), the total Number of Chapters (4), and the Playing elapsed Time for the title (5). The heading will disappear automatically after 3 seconds if DISPLAY button is not pressed.

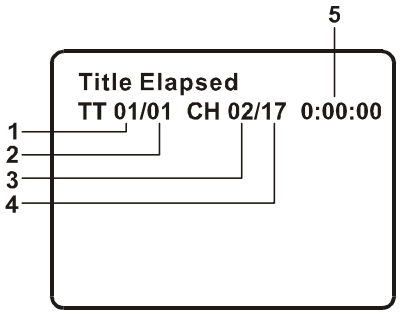

Title, Chapter Number, and Time Screen Display

b. Press 'DISPLAY' constantly to choose the options below circularly.
Title Elapsed: The elapsed time of the title
Title Remain: The remaining time of the title
Chapter Elapsed: The elapsed time of the chapter
Chapter Remain: The remaining time of the chapter
Display Off: The DVD's time Information will not be displayed.



PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

2. ANGLE

During playback of a disc, press 'ANGLE' to display the available angles for discs containing multi-angles*, with the current angle number (1) and the total number of angles (2) displaying. Press 'ANGLE' to select another angle, then press again to exit and return to the normal viewing angle. The angle display will disappear automatically if the 'ANGLE' button is not pressed again within 3 seconds.

***NOTE:** Not all discs contain this feature.

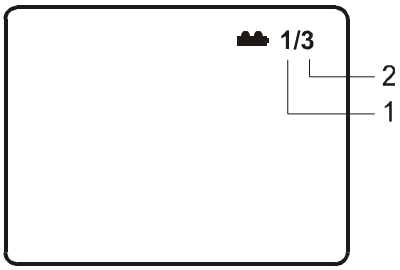

Angle Screen Display

3. SUBTITLE

During disc playback press 'SUBTITLE' to select the subtitle language you desire*, with the current Subtitle Language Number (1) and the total Number of Subtitle Languages (2) displayed. If there are multiple languages press 'SUBTITLE' again to select another subtitle language. To turn subtitles OFF, press the 'SUBTITLE' button until 'Subtitle Off' is displayed. The Subtitle display will disappear automatically if the 'SUBTITLE' button is not pressed again within 3 seconds.

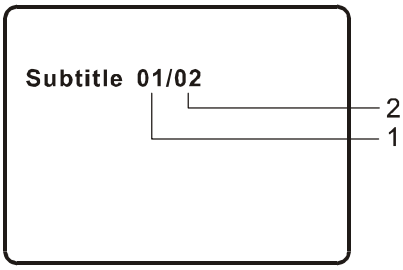

Subtitle Screen Display

* Some DVDs only allow access to this function through the DVD menu

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

4. AUDIO

During playback press 'AUDIO' to select the audio language you desire*, with the current Audio Channel Number (1) and the total number of Audio Channels (2) displayed. Press AUDIO again to select another audio language. The audio display will disappear automatically if the 'AUDIO' button is not pressed within for 3 seconds.

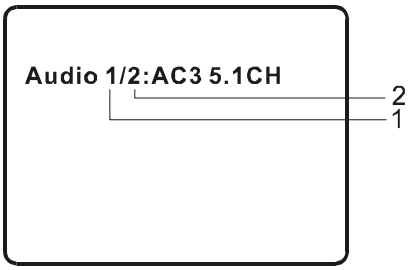

Audio Language Screen Display

* Some DVDs only allow access to this function through the DVD menu.

5. ZOOM

During playback press 'ZOOM' to enlarge the picture by 2x, 3x or 4X with the current zoom multiple.(1)Press "zoom"one time ,the picture will be enlarged 2X.(2)Press "zoom" a second time ,the picture will be enlarged 3X.(3)Press "zoom" a 3rd time ,the picture will be enlarged 4X.(4)Press "zoom" a 4th time ,the picture will return to normal size.

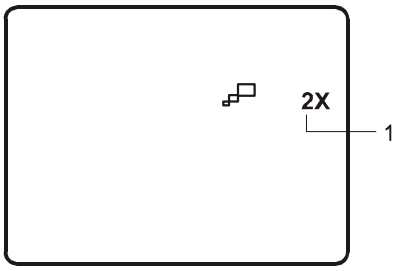

Zoom Screen Display

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

6. A-B REPEAT

a. During playback press a first time ‘A-B’ to set the Starting Point A.

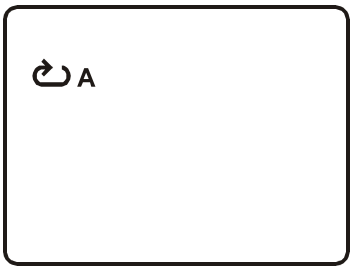

A-B Repeat Starting Point Screen Display

b. Press ‘A-B’ a second time to set the Ending Point B and the player will repeatedly play the part between Point A and Point B.

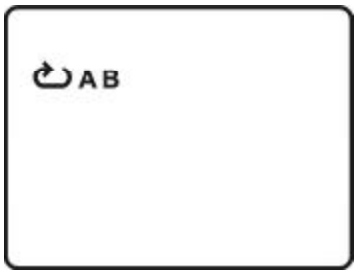

A-B Repeat Ending Point Screen Display

c. Press A-B a third time to cancel A-B repeat and resume normal playback.

A-B Repeat Cancelled Screen Display

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

7. REPEAT

a. During playback press 'REPEAT' constantly to see the repeat mode.

Chapter: Repeat the current chapter
Title: Repeat the current title
All: Repeat all chapters and titles
Off: Resume normal playback

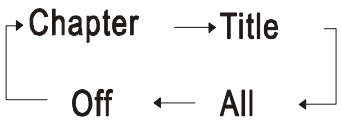

DVD Repeat Mode

The 'Chapter' repeat display shows below for example:

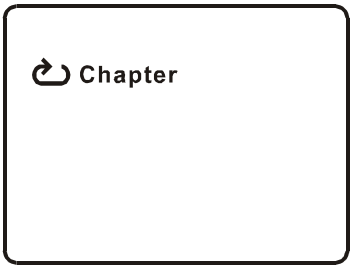

Chapter Repeat Screen Display

K. Variable Playing Mode

1. Playing Audio CDS

When playing an audio CD press the DISPLAY button constantly on the remote to view time information. The options below appear on screen display circularly to show you what information is available using this function.

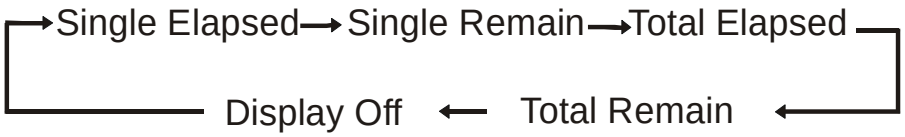

CD Display Mode

Single Elapsed: The current track playing and playing time of that track will display on the screen.

Single Remain: The current track playing and the amount of time left.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

Total Elapsed: The current track playing and the total time that the CD has been playing.

Total Remain: The current track playing and the amount of time remaining on the CD.

Display Off: The CD time Information will not be displayed.

Take 'Single Elapsed' display as a example:

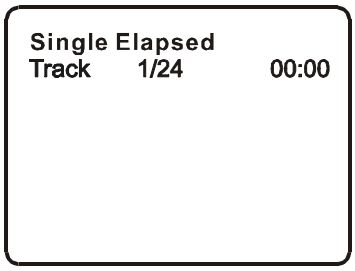

Single Elapsed Screen Display

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options:

- *Track*- repeats the track that is playing.
- *All*- repeats the disc that is playing.
- *Off*

As you toggle through the options, the repeat option changes. The selected repeat option loops repeatedly until you turn it off.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

2. Playing MP3 Discs

MP3 is a format for storing digital audio. An audio CD-quality song is compressed into the MP3 format with very little loss of audio quality while taking up much less disc space. CD-R /RW discs that have been encoded in MP3 format are compatible with this system.

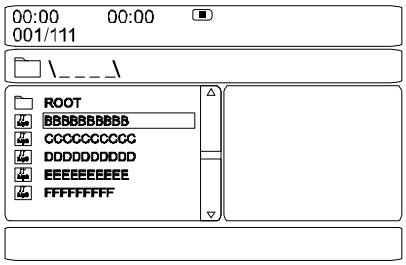

MP3 MENU Screen Display

When a MP3 disc is inserted into the unit, the menu screen appears automatically. You can use the menu screen to select your desired folders and songs or the system plays the songs in the order they were burned onto the disc.

1. Press the ▲ or ▼ button to choose a folder from the folder list on the left side of the screen.
2. Press ENTER to select the highlighted folder. The songs available under the folder will be listed.
3. Use ▲ or ▼ button to choose a song from the list. Press ENTER to select and begin playback of the highlighted song.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

4. Use the ⏭ (NEXT) button to move to the next song. Press the ⏮ (PREVIOUS) button to move to the beginning of the previous song.

USING THE REPEAT FEATURE

The default mode for the Repeat feature is OFF(Folder). Pressing REPEAT consecutively changes the repeat options:

- Single
- Repeat One (repeat playback of a song)
- Repeat Folder (repeat playback of a specific folder)
- Folder (normal playback)

As you toggle through the options, the repeat mode changes. The selected repeat mode loops repeatedly until you turn it off.

NOTICE

- " 🗀 " icon in front of a file name indicates that this is a folder, not an MP3 file.
- "MP3" icon in front of a file name indicates that this is a MP3 file.

Note:

Due to the company's policy of constant improvement and technical refinement, the company reserves the right to change or alter software.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

3. Playing JPG file

1) Load the JPG Disc into tray.
2) Select JPG file by pressing “UP/DOWN” or ENTER button through menus or submenus. To go back previous menu page, use LEFT button.
3) You can preview the JPG file which you selected by pressing “PLAY” or “ENTER”.
4) Pressing the “LEFT“ Key will rotate the picture 90 degrees counterclockwise. Pressing the “RIGHT“ Key will rotate the picture clockwise.
5) When browsing the photos, you can reverse the photo vertically by pressing “UP” key,or you can reverse the photos horizontally by pressing “DOWN” key.
6) When you browse the JPG file, press “DISPLAY”, there will be different refresh mode below:

WIPE TOP, WIPE BOTTOM, WIPE LEFT, WIPE RIGHT, DIAGONAL WIPE LEFT TOP, DIAGONAL WIPE RIGHT TOP, DIAGONAL WIPE LEFT BOTTOM, DIAGONAL WIPE RIGHT BOTTOM,EXTEND FROM CENTER H, EXTEND FROM CENTER V, COMPRESS TO CENTER H, COMPRESS TO CENTER V, WINDOW H, WINDOW V, WIPE FROM EDGE TO CENTER

7) When previewing the file, pressing “ANGLE”, “SUBTITLE”, “AUDIO”, “NUMBER”, “AB”, a hand icon will appear on the display meaning that these options are not available.
8) Press “STOP” to browse the JPG file, “SLIDE SHOW” “MENU” will display on the screen.
9) When browsing the picture, press “STOP” and thumbnail size picture will be displayed. You can select the picture you desire by using the UP/DOWN/LEFT/RIGHT/ENTER key.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

L. Connecting to a TV or another monitor (Refer to Figure 9)

You can also connect the DVD player to a TV to enjoy high quality stereo sound and picture on another monitor. **Connection cable not included.**

1. Connect one end of the audio/video cable's black plug (optional, 1/8" stereo plug) into the unit's DVD AUDIO OUT jack, and connect the other end to the AUDIO INPUT jacks on your TV or Monitor (white = left channel, red = right channel).

2. Connect the audio/video cable's yellow plug (optional) into the DVD VIDEO OUT jack on the right of the unit, and the other yellow plug to the VIDEO INPUT jack on your TV or Monitor.

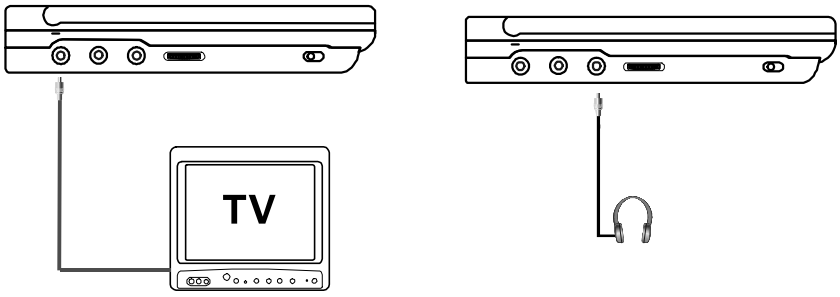

Figure 9

* Optional wired headphones may be used with the unit. Simply plug in the headset to headphone jack.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

M. Specifications

Compatible DISC: DVD/CD/MP3
Signal system: NTSC/PAL
Panel size: 7 inch
Frequency response: 20 Hz to 20 kHz
Video output: 1 Vp-p/75 Ohm, unbalanced
Audio output: 1.4V_{rms}/10kOhm
Audio S/N: Better than 60 dB
Dynamic range : Better than 85 dB
Laser: Semiconductor Laser, Wave Length: 650 nm/795 nm
Power source: DC 9V
Power consumption: 6 W
Operating temperature: 5~35°C
Weight : 0.43 kg
Dimensions (W x D x H): 6.54 X 5.59 X1.02inches
166x 142 x 26mm

Single Monitor

Colour System:	PAL
Screen Size:	7 Inches
Power Supply:	DC 10V
Power Consumption:	7W
Operating Temperature:	41~104º F (5~40ºC)
Operating Humidity:	10-75%
Storage Temperature:	4~140º F (-20~60ºC)
Dimensions (W x D x H):	204 x 151 x 12 mm
Weight:	0.327kg

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

N. Troubleshooting

PROBLEM	SOLUTION
No sound or distorted sound	• Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks.
Can't advance through a movie	• You can't advance through the opening credits and warning information that appears at the beginning of movies because the disc is programmed to prohibit that action.
The icon ( ) appears on screen	The feature or action cannot be completed at this time because: 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. You've requested a title or chapter number that is out of range.
Picture is distorted	• The disc might be damaged. Try another disc. • It is normal for some distortion to appear during forward or reverse scan.
No forward or reverse scan	• Some discs have sections that prohibit rapid scanning or title and chapter skip. • If you try to skip through the warning information and credits at the beginning of a movie, you won't be able to. This part of the movie is often programmed to prohibit skipping through it.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com

Troubleshooting (Cont)

PROBLEM	SOLUTION
IR sensor inoperative	• Verify that the batteries in the remote are fresh. • Verify that the remote sensor eye is not obstructed. • Verify that the infrared transmitter is affixed over the sensor eye of the component to be controlled.
Disc won't play	• Insert a disc with the label side facing up. • Check the type of disc you put into disc tray. This DVD only plays digital video discs, audio CDs and MP3s.
Play starts, but then stops immediately	• Both the unit and the disc are coded by region. If the regional codes don't match, the disc can't be played. This DVD is Region Number 2. • The disc is dirty. Clean it. • Condensation has formed. Allow player to dry out.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste.There are separate collection systems for recycling in the EU.

For more information, please contact the local authority or your retailer where you purchased the product.

PDF created with FinePrint pdfFactory Pro trial version http://www.fineprint.com